

CD Player Instructions

Fraser Hall

Using the CD Player

To get started follow the instructions in sequence below:

1. Turning everything on

In the kitchen, to the right of the access hatch, locate the wooden audio cabinet.

Above the cabinet locate the white switch and press down to turn the equipment on.



2. Access to the audio equipment

Opening the cabinet door will give access to the TASCAM DVD/CD player, amplifier and audio setting. All equipment will now be on and ready to use.



Use the TASCAM handset to operate the CD player functionality - **Including the volume settings rather than changing the volume on the player itself.**

The CD Player will automatically connect to the hall speakers.




3. Operating the CD Player

Using the handset:

- Press the **Blue STANDBY/ON** button to wake the CD player if not already active
- Press the **OPEN/CLOSE** button for inserting or removing the disc
- Press the standard CD operating buttons to play and navigate the CD disc.

▶ Play

■ Stop

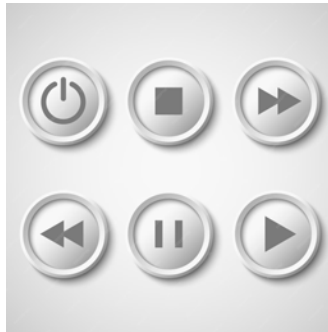

- Once the CD playing is complete **use the handset** to stop play, remove the disk and then close the CD tray. On the handset press the **STANDBY/ON** button to turn the CD player off.

**PLEASE REMEMBER TO TURN OFF
THE AUDIO EQUIPMENT, USING THE
MAIN SWITCH ABOVE THE CABINET**

**YOU HAVE NOW DEACTIVATED THE CD PLAYER AND
AUDIO EQUIPMENT.**

Thank You 😊



If in difficulty or unsure please contact Martin on 07813 878227